

IMPORTANT SAFETY

- Read all the instructions carefully before using and retain this for further reference.
- Before you connect the appliance to the mains supply, make sure that the voltage indicated on the rating plate, matches the mains voltage in your home. If it does not, contact your dealer and do not use the appliance.
- This appliance is not intended for use by young children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Keep the appliance and its cord out of reach of children less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **FOR HOUSEHOLD USE ONLY.**
- Only use your hand blender for its intended domestic use.
- Before plugging in, make sure your household electricity supply is the same as the one shown on the power handle.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufactures instructions.
- Never touch the blades while the hand blender is plugged in.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning. Avoid touch the moving parts. **SHARP CUTTING BLADES.**
- Keep fingers, hair, clothing and utensils away from moving parts.

IMPORTANT SAFETY INFORMATION

Read all the instructions carefully before use.

Retain this manual for further reference.

⚠ ELECTRICAL HAZARD ⚠

- Only connect the appliance to an electrical supply matching the rating on the power handle. If not, contact your dealer—do not use.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- Never use a damaged hand blender—get it checked or repaired.
- Never immerse the power handle in water or let the cord or plug get wet—you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorized attachment.
- Do not use the appliance for longer than 60 seconds in any four-minute period—it may overheat and shorten the life of the motor.
- Always disconnect the blender from the mains if
 - leaving it unattended
 - moving the appliance
 - adding ingredients
- Unplug after use.

⚠ FOR HOUSEHOLD USE ONLY ⚠

- Only use your hand blender for its intended domestic use.
- Keep the appliance out of reach of children under 8 years old.
- Supervise children 8+ while they are using, cleaning, or otherwise maintaining the appliance.
- Do not allow use by persons with reduced physical, sensory or mental capabilities, or those lacking experience and knowledge, unless they are supervised or instructed in proper use and understand the hazards.

⚠ SHARP CUTTING BLADES ⚠


- Never touch moving parts.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Never touch the blades while the hand blender is plugged in.
- Take care when handling the sharp cutting blades, emptying the bowl, and cleaning the appliance.
- Switch off the appliance and disconnect from supply before approaching parts which move in use.

Original

- Unplug after use.
- Always **DISCONNECT** the blender from the mains if
 - it is left unattended;
 - before moving the appliance or adding the food.
- Switch off the appliance and disconnect from supply before approaching parts which move in use.
- Never blend hot oil or fat.
- Never use a damaged hand blender. Get it checked or repaired.
- Never immerse the power handle in water or let the cord or plug get wet - you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorized attachment.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To ensure long life of your machine, don't use your hand blender for longer than 60 seconds in any four minute period. It may overheat and shorten the life of the motor.

KNOW YOUR APPLIANCE

1. Top Cover
2. Switch Button
3. Handle
4. Blender Shaft

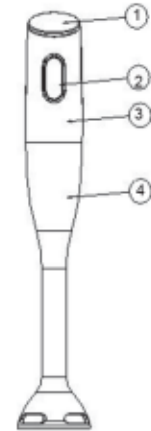

To use the hand blender

- . Clean the blender shaft.
- . Check if the power cord is not damaged.
- . Make sure your electricity supply is the same as the one shown on the power handle.
- . Fill the food to the container.
- . Plug in, hold the power handle with steady. Switch the appliance on by pressing the switch button.
- . Immerse the blade guard completely in the ingredients.
- . Blend the ingredients by moving the appliance slowly up and down and in circles.
- . After you have completed blending, Release the switch button, then unplug from outlet.
- . Warning: The continuous operating time must be less than 60 seconds. Never blend hot oil, fat or meat.
- . If your blender gets blocked, first stop and unplug before clearing.
- . After use, unplug.
- . Always switch off and unplug before cleaning. Please refer to the instruction in the "care and cleaning".

KNOW YOUR APPLIANCE

PARTS

Hand blender diagram key:

1. Top Cover
2. Switch Button
3. Power Handle
4. Blender Shaft
(Blade Guard at end)

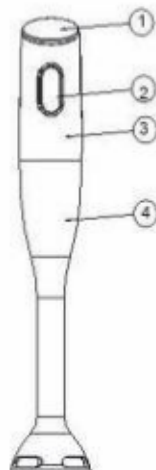


Figure a: Parts of your Argos Hand Blender

PURPOSE

Prepare food in the following ways:

- Blend fluids (e.g. dairy products, soups, fruit juices, mixed drinks and shakes)
- Mix soft ingredients (e.g. pancake batter, mayonnaise)
- Puree cooked ingredients (e.g. sauces, baby food)



Never blend hot oil, fat or meat.

USE YOUR APPLIANCE

NOTE: Make sure your electrical supply is the same as the one shown on the power handle.

To use the hand blender:

1. Check that the power cord is not damaged.
2. Clean the blender shaft.
3. Add ingredients to your mixing container.
4. Plug in unit while holding the power handle steady.
5. Turn on the appliance by pressing the switch button.
6. Immerse the blade guard completely in the ingredients.
7. Blend the ingredients by moving the appliance slowly up and down and in circles.
8. After you have completed blending, release the switch button.
9. After use, unplug.



If your blender gets blocked, stop and unplug before clearing.